



F.A.S.T. TPS Wiring Instructions

Integration of the supplied TPS to the FAST harness will require removal of the current TPS plug on the FAST harness and attaching to the supplied Hilborn TPS harness. Use the following wiring schematics below for correct connections.

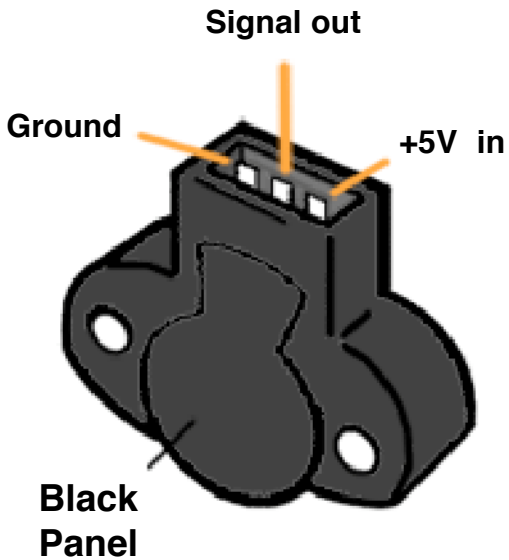

Black Panel TPS Sensors	
<u>FAST Harness</u>	<u>Hilborn Harness</u>
Red	White
Black	Black
White/ Red	Purple

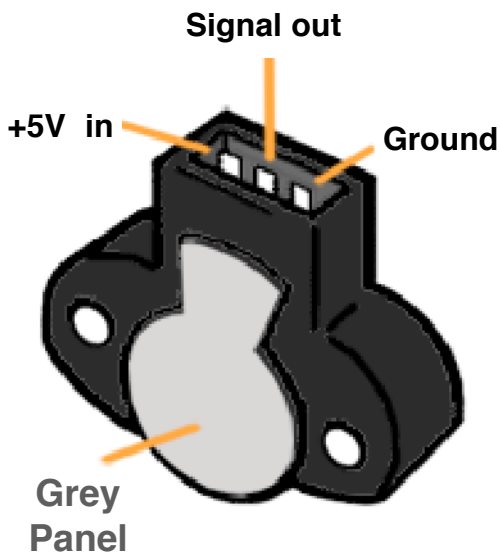

Grey Panel TPS Sensors	
<u>FAST Harness</u>	<u>Hilborn Harness</u>
Red	Black
Black	White
White/ Red	Purple