



Holley TPS Wiring Instructions

Integration of the supplied TPS to the Holley harness will require removal of the current TPS plug on the Holley harness and attaching to the supplied Hilborn TPS harness. Use the following wiring schematics below for correct connections.

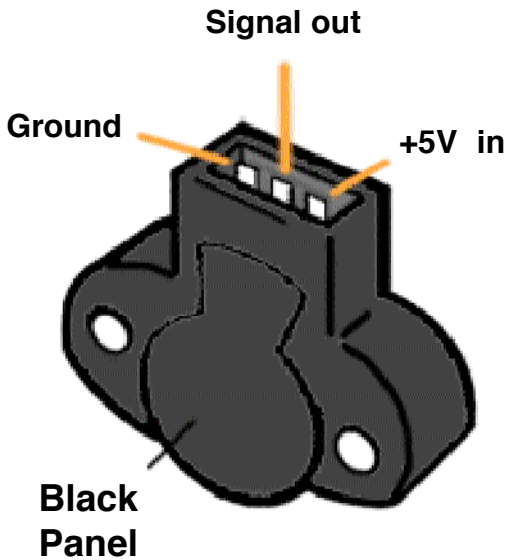

Black Panel TPS Sensors	
<u>Holley Harness</u>	<u>Hilborn Harness</u>
Orange	White
Black/ White	Black
Green	Purple or Red

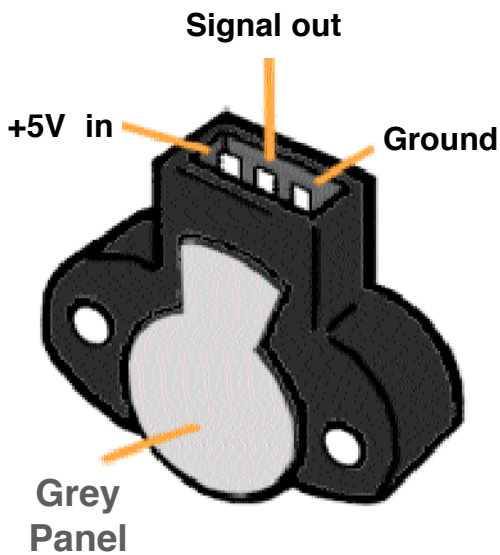

Grey Panel TPS Sensors	
<u>Holley Harness</u>	<u>Hilborn Harness</u>
Orange	Black
Black/ White	White
Green	Purple or Red